



***FOR MASTER/SLAVE WIRING ONLY!
(SEE INSTRUCTIONS)**

**WIRED FOR
115V, 1Ø**

**UNITS SHIPPED AS RIGHT HAND.
FOR LEFT HAND SEE INSTRUCTION MANUAL.**

PowerMaster	
FOR USE WITH: 2000 SERIES SLIDE GATE OPERATOR WITH GSMCB-01 BOARD	
DATE: 2/8/02	REV. 2
BY: F.S.	BSG, SG, SGI
CONTROL WIRING DIAGRAM	
WIRING DIAGRAM 6001SL	
© Copyright PowerMaster 1997 No portion of this diagram may be reproduced without the expressed written permission of the manufacturer.	