



**UNITS SHIPPED AS RIGHT HAND.
FOR LEFT HAND SEE INSTRUCTION MANUAL**

WIRED FOR
115 V, 1ϕ

PowerMaster	
FOR USE WITH: 2000 SERIES OPERATOR WITH GSMCB-02 AND PIM-RTB	
DATE: 1/7/2017	REV. 8
BY: J.D.	RSG, RSW, MSW
CONTROL WIRING DIAGRAM	
WIRING DIAGRAM 6002	
© Copyright PowerMaster 2006 No portion of this diagram may be reproduced without the expressed written permission of the manufacturer	